



## U/FTP CABLE Installation Manual Part 1/2




1. Strip outer jacket.  
Minimum strip length - 40mm

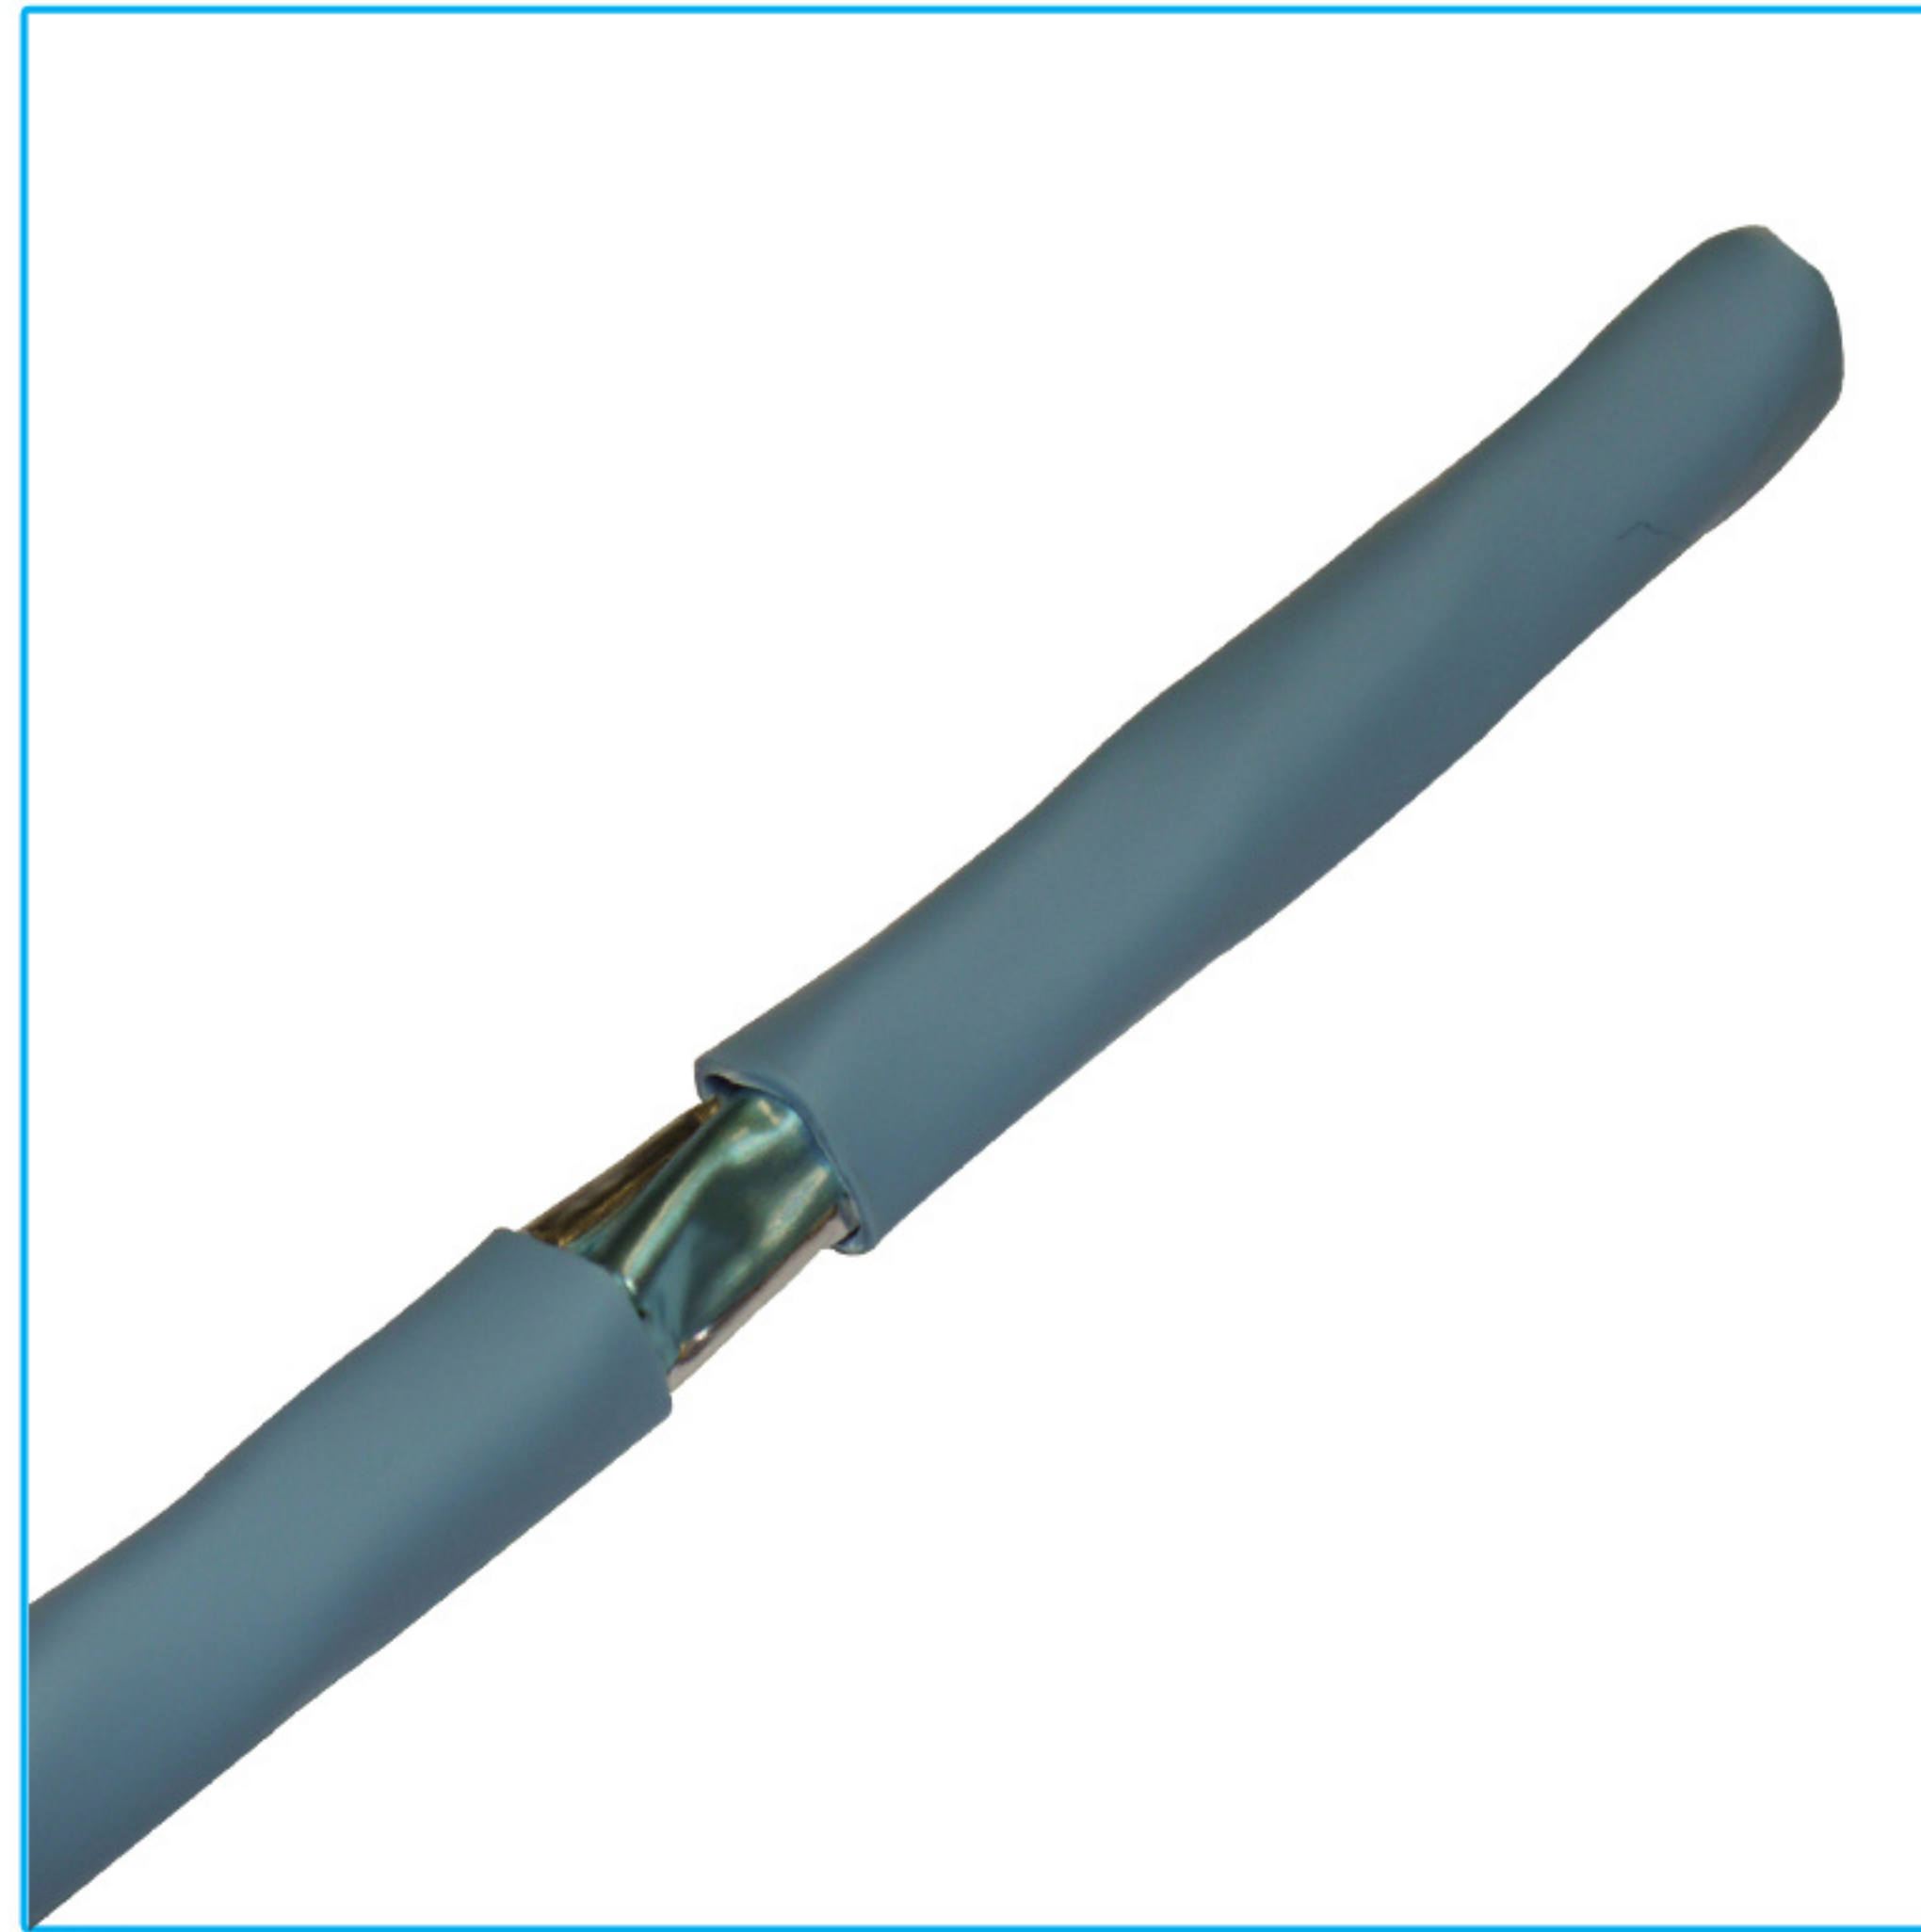


2. Remove jacket and mylar.

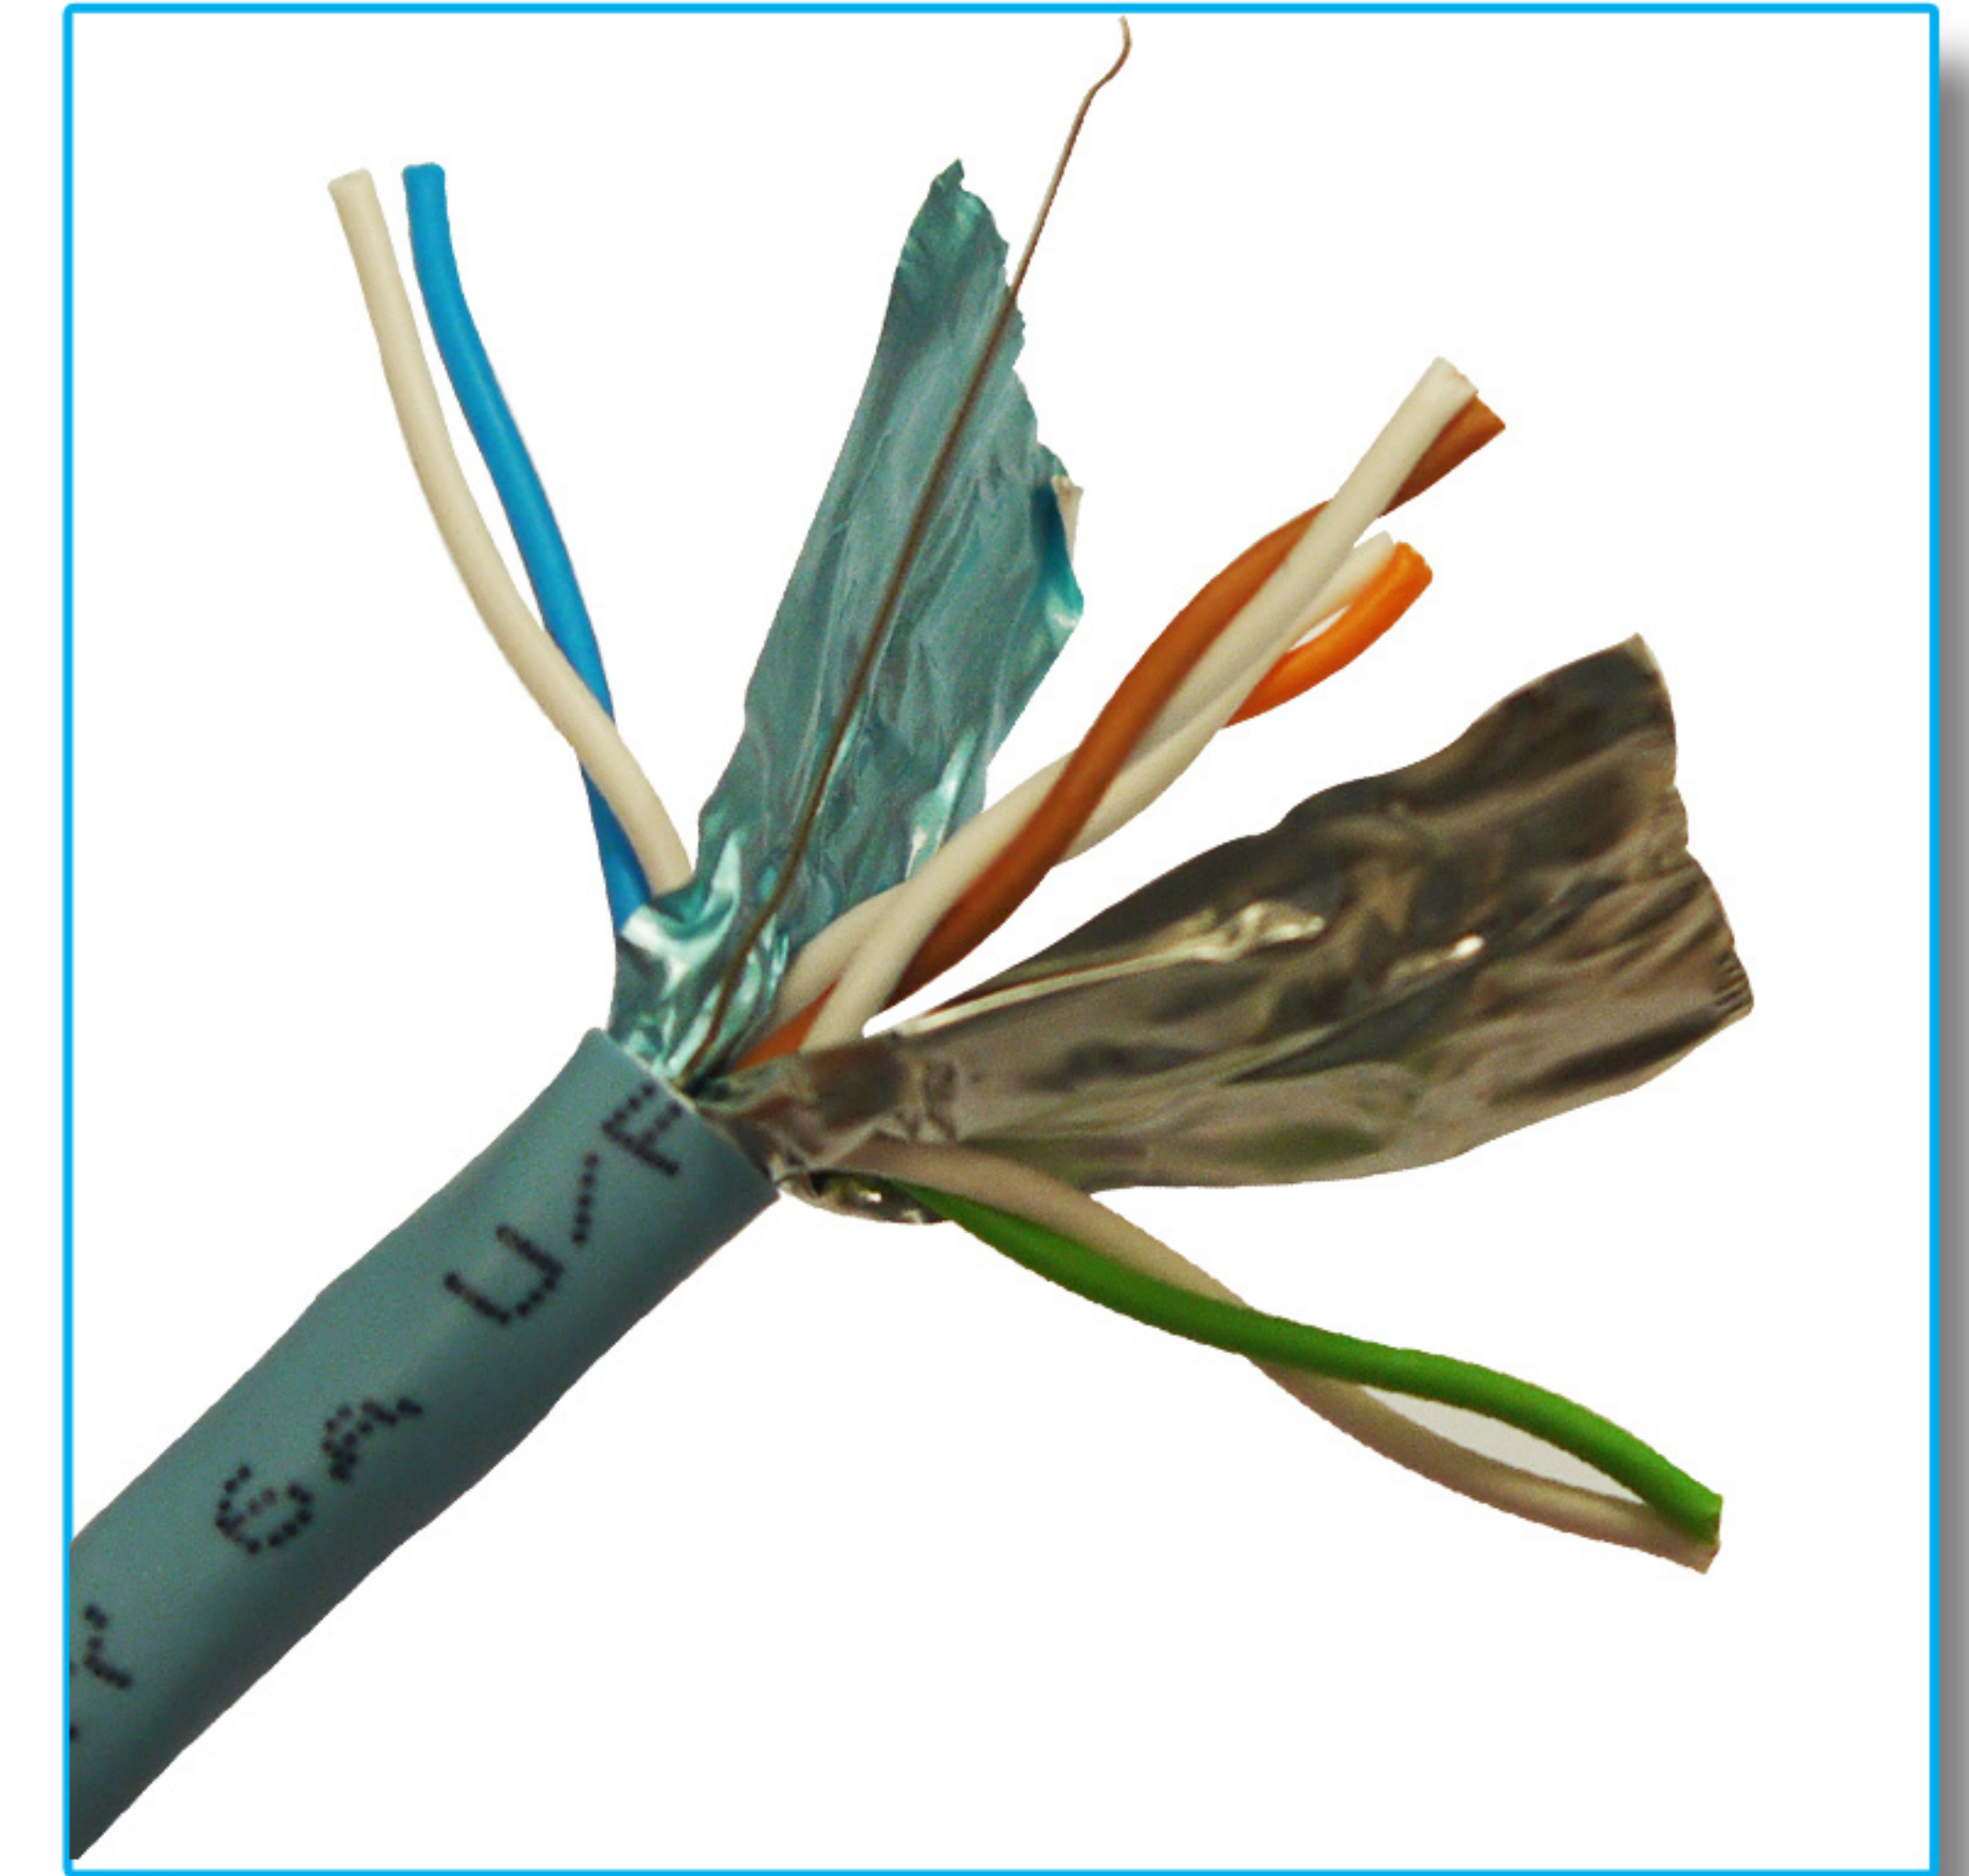


3. Fold foil back.

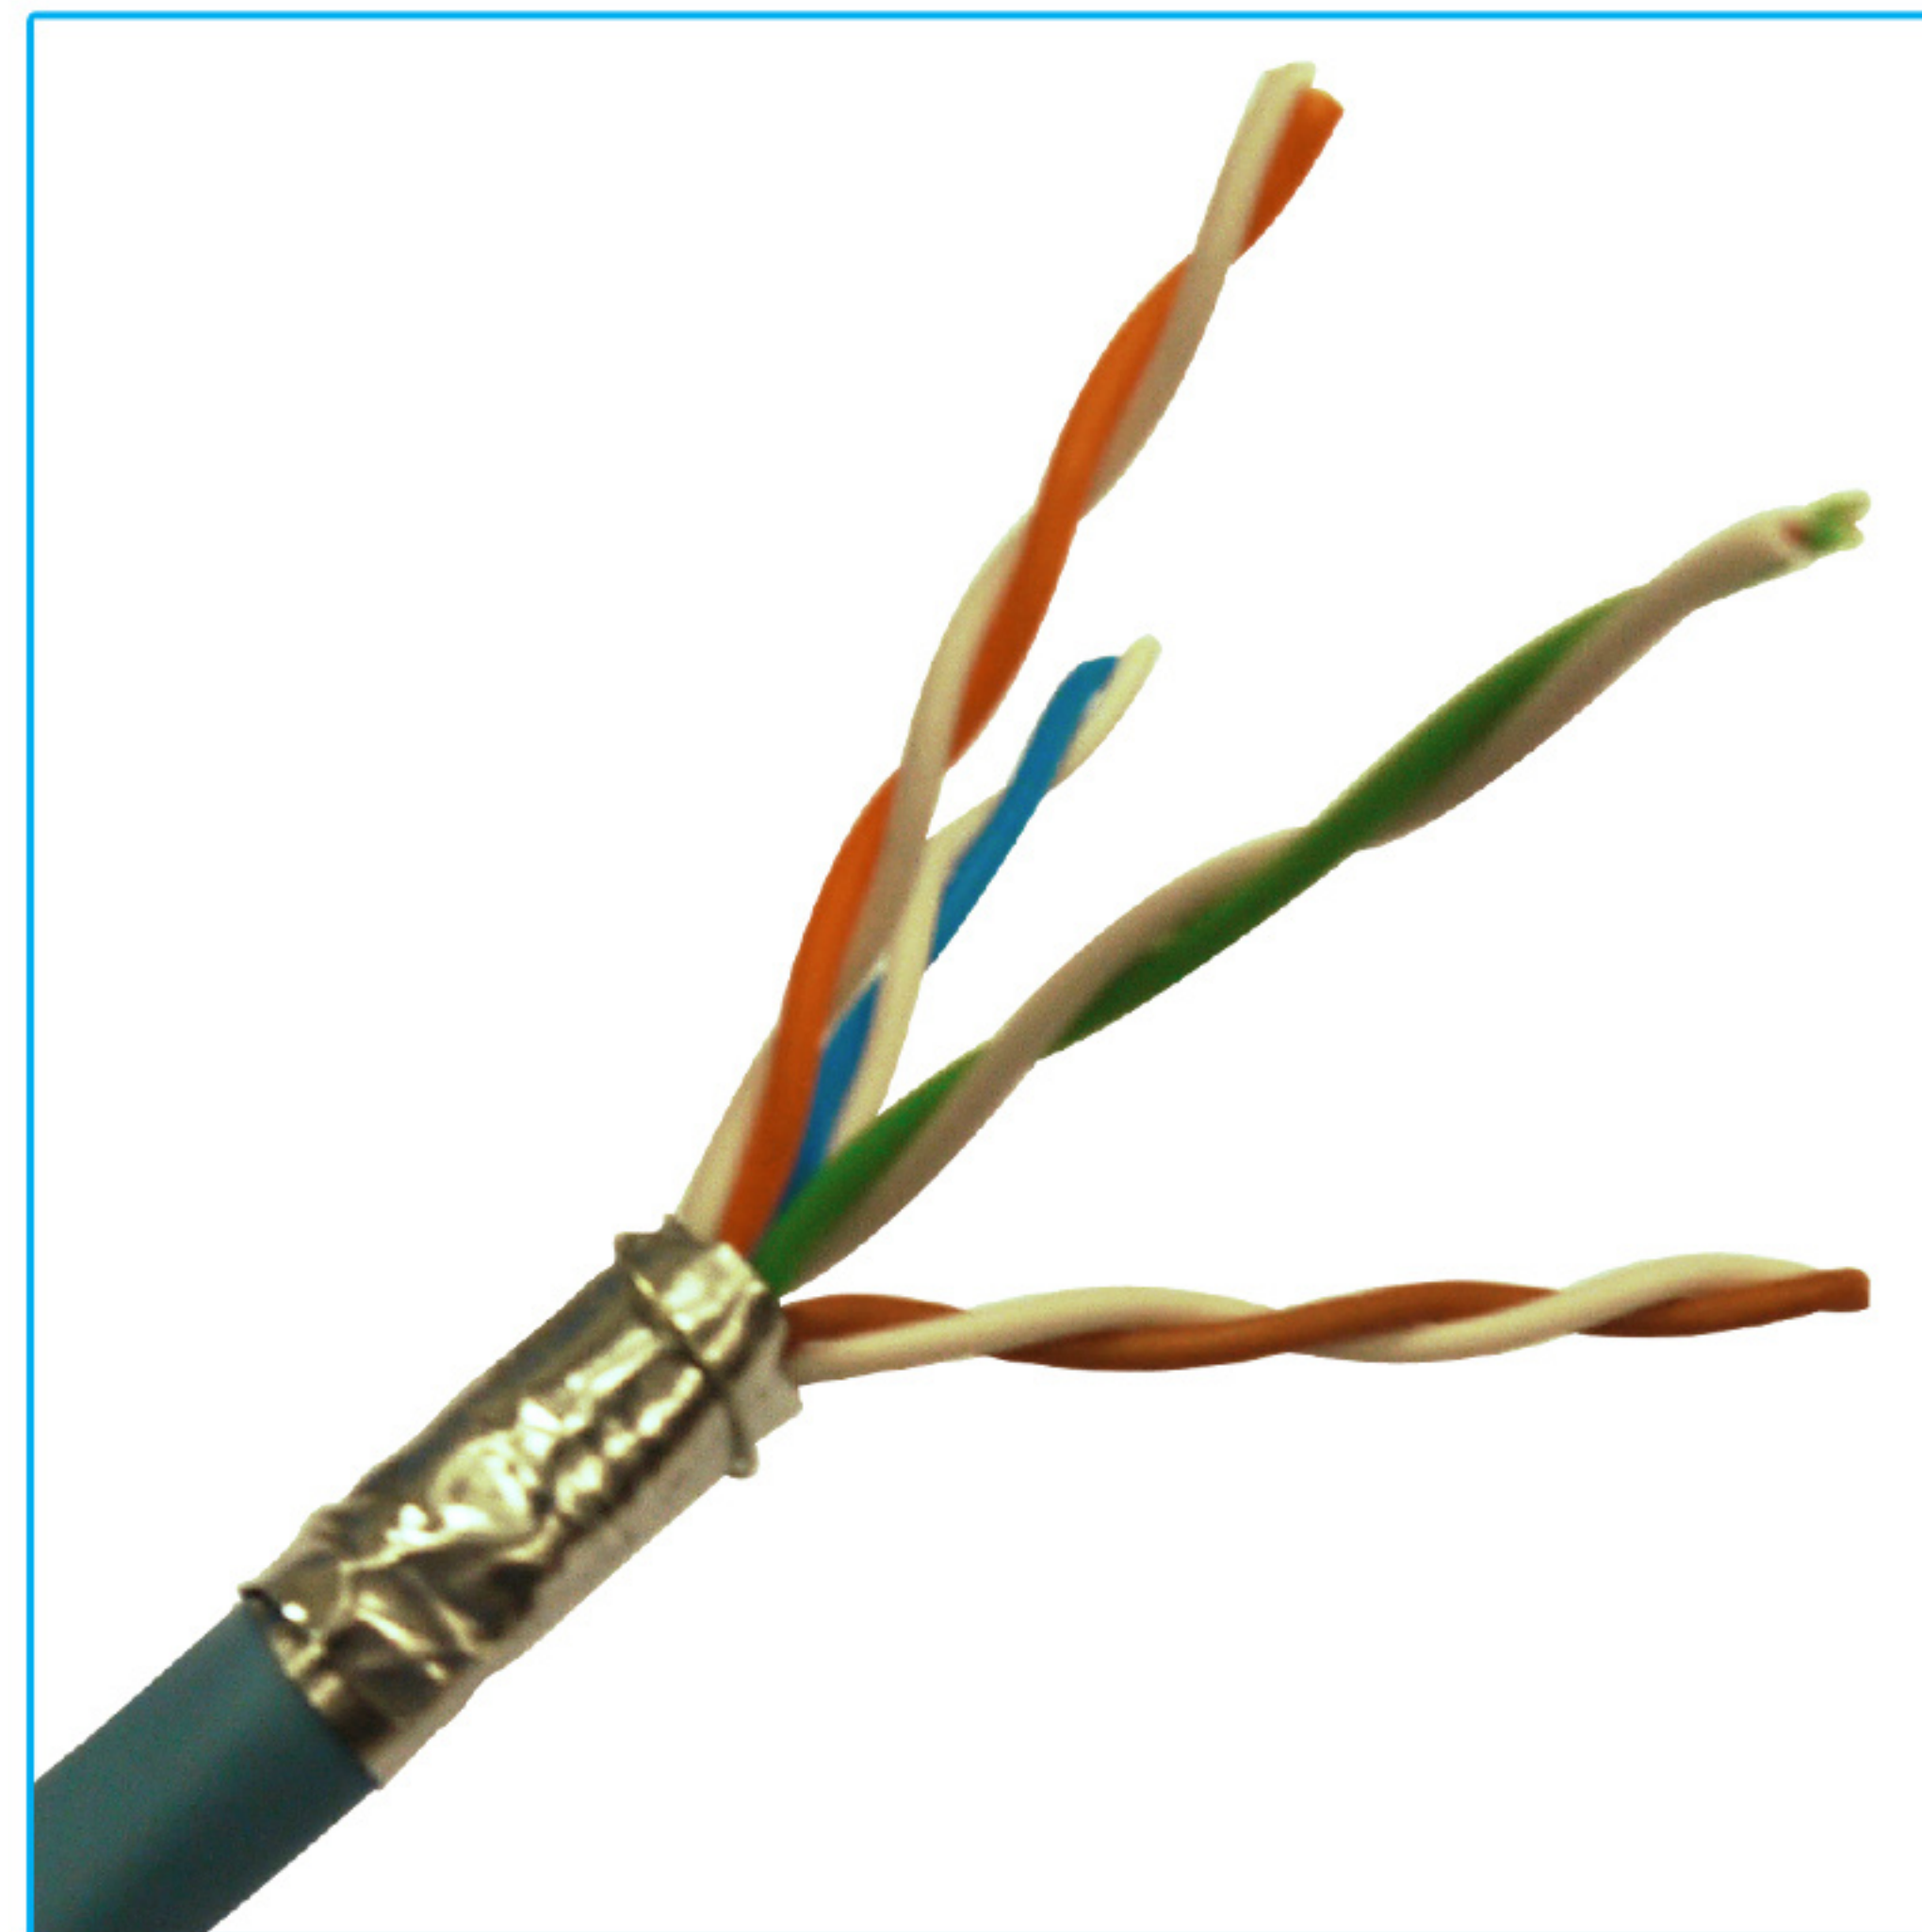

4. Once foil is folded back, wrap drain wire around foil.

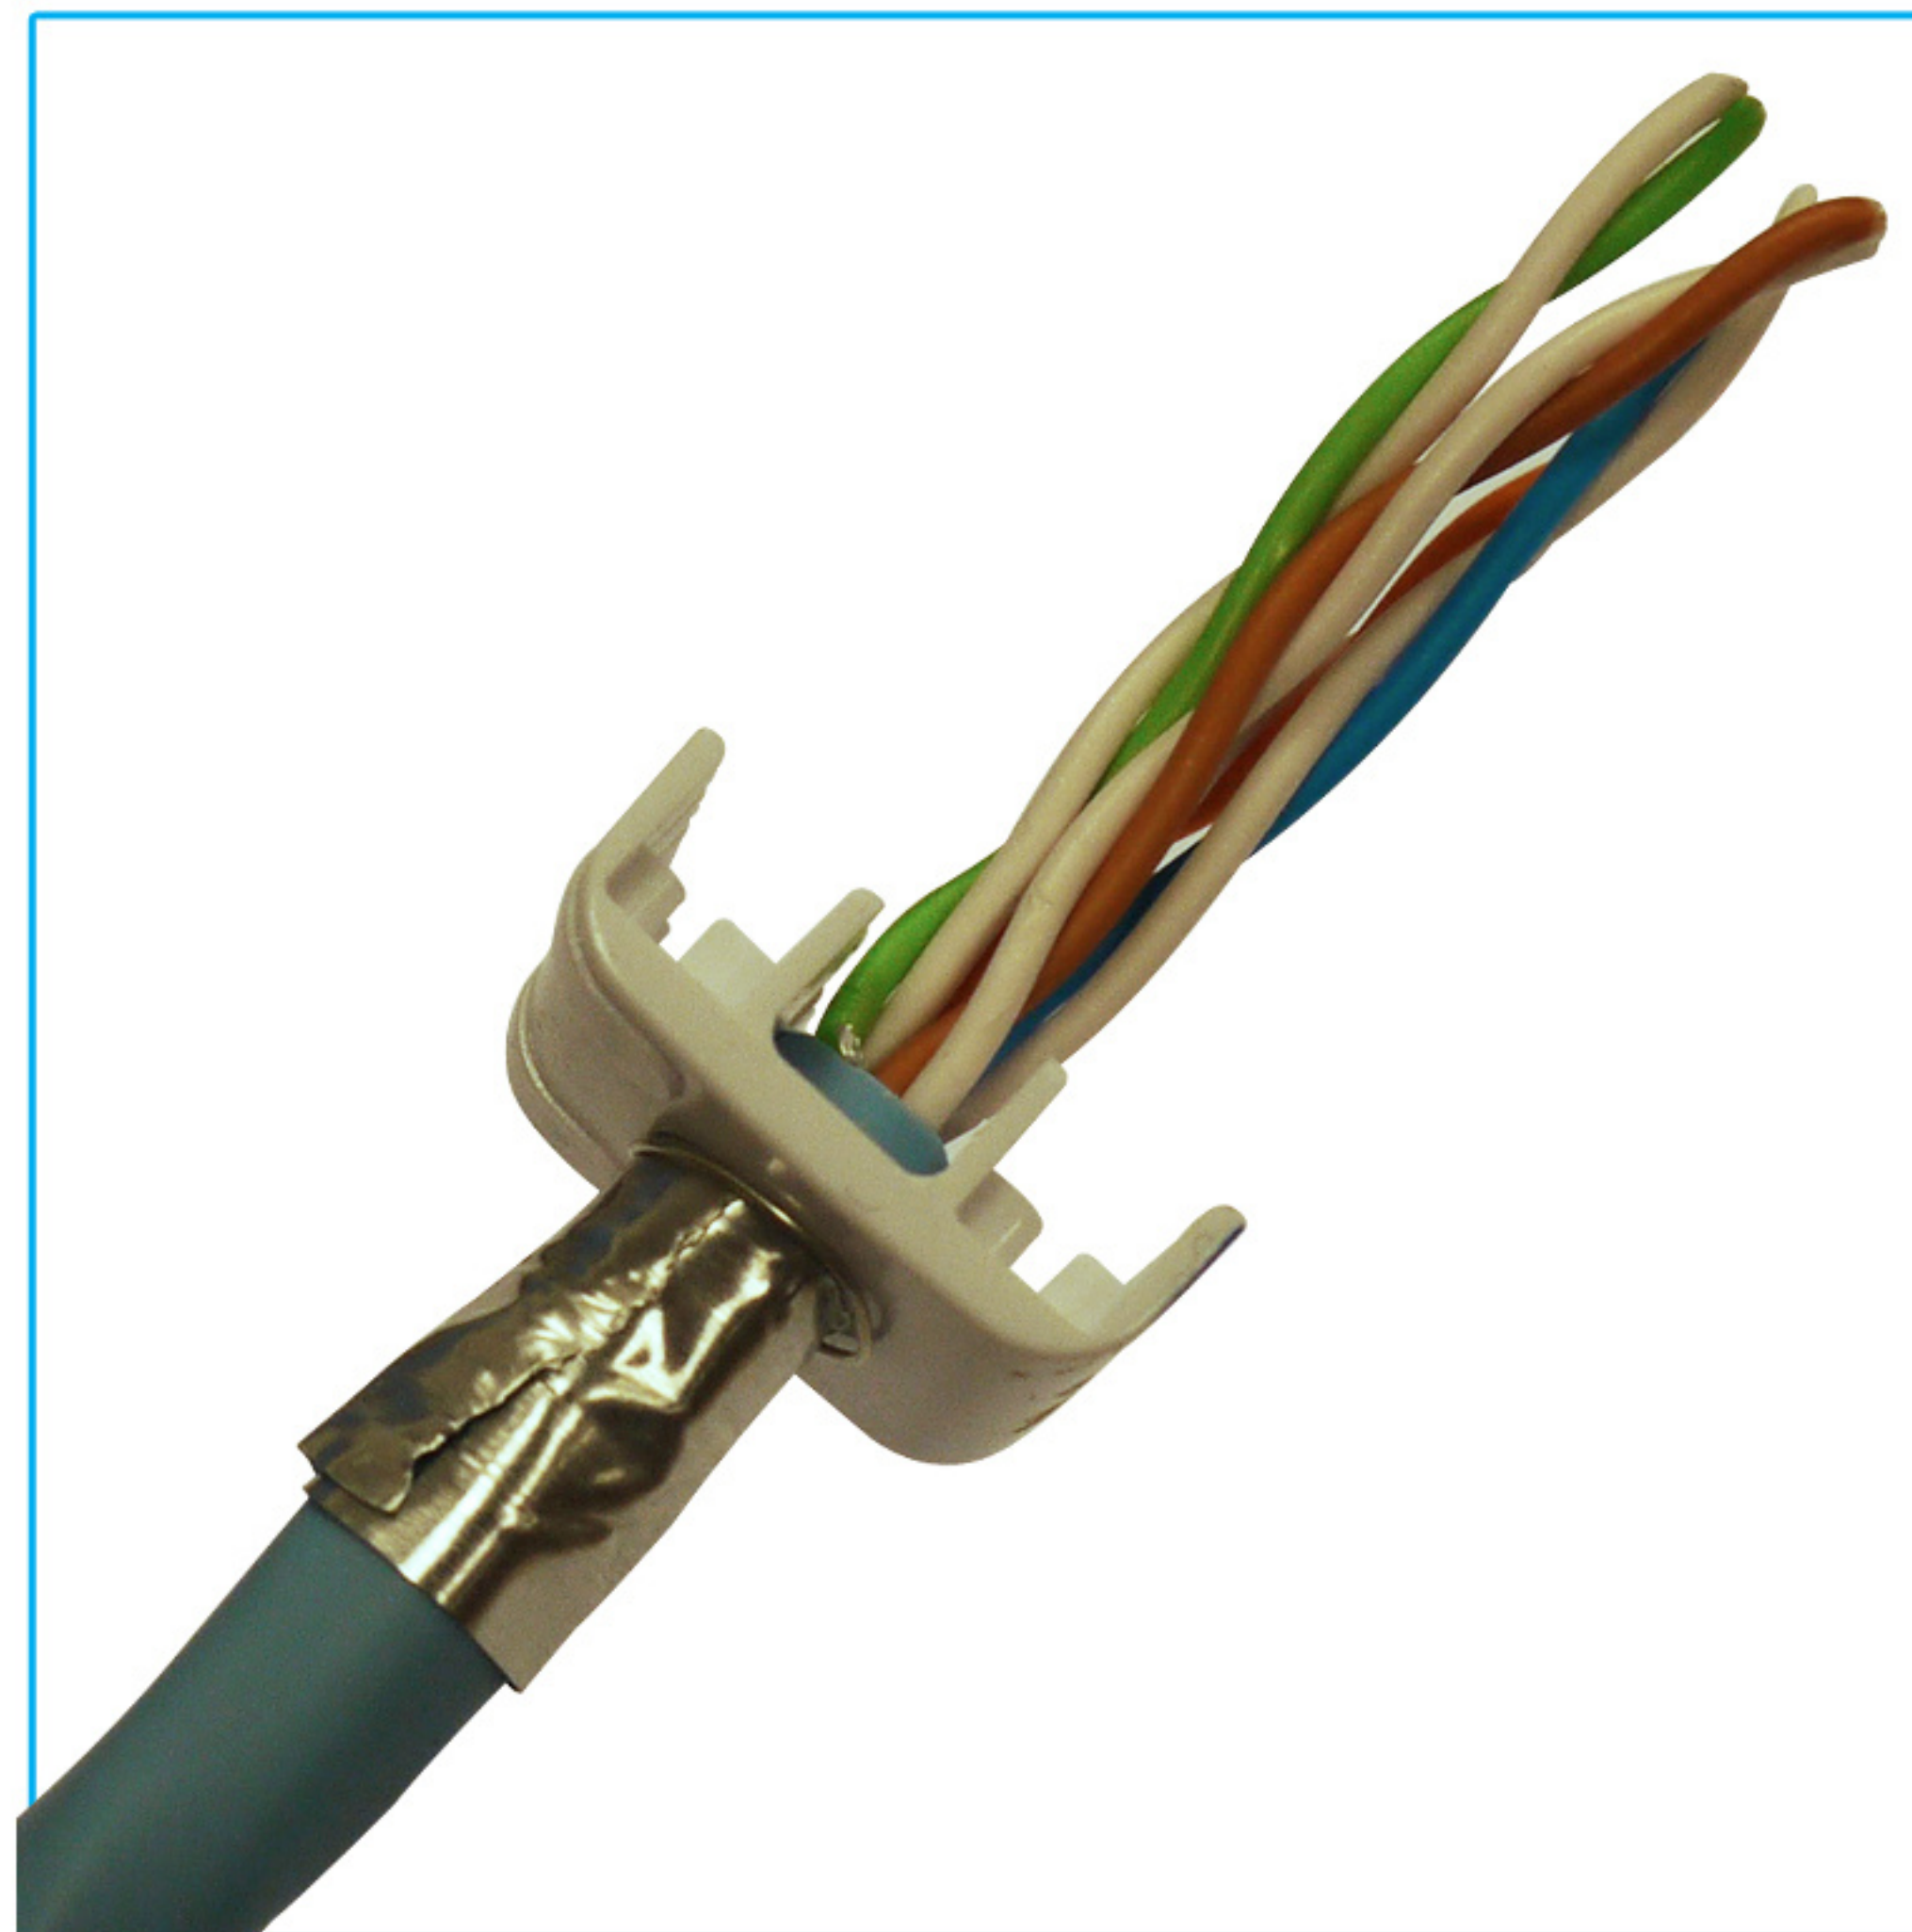

5. Slide the cable guide over cable pairs

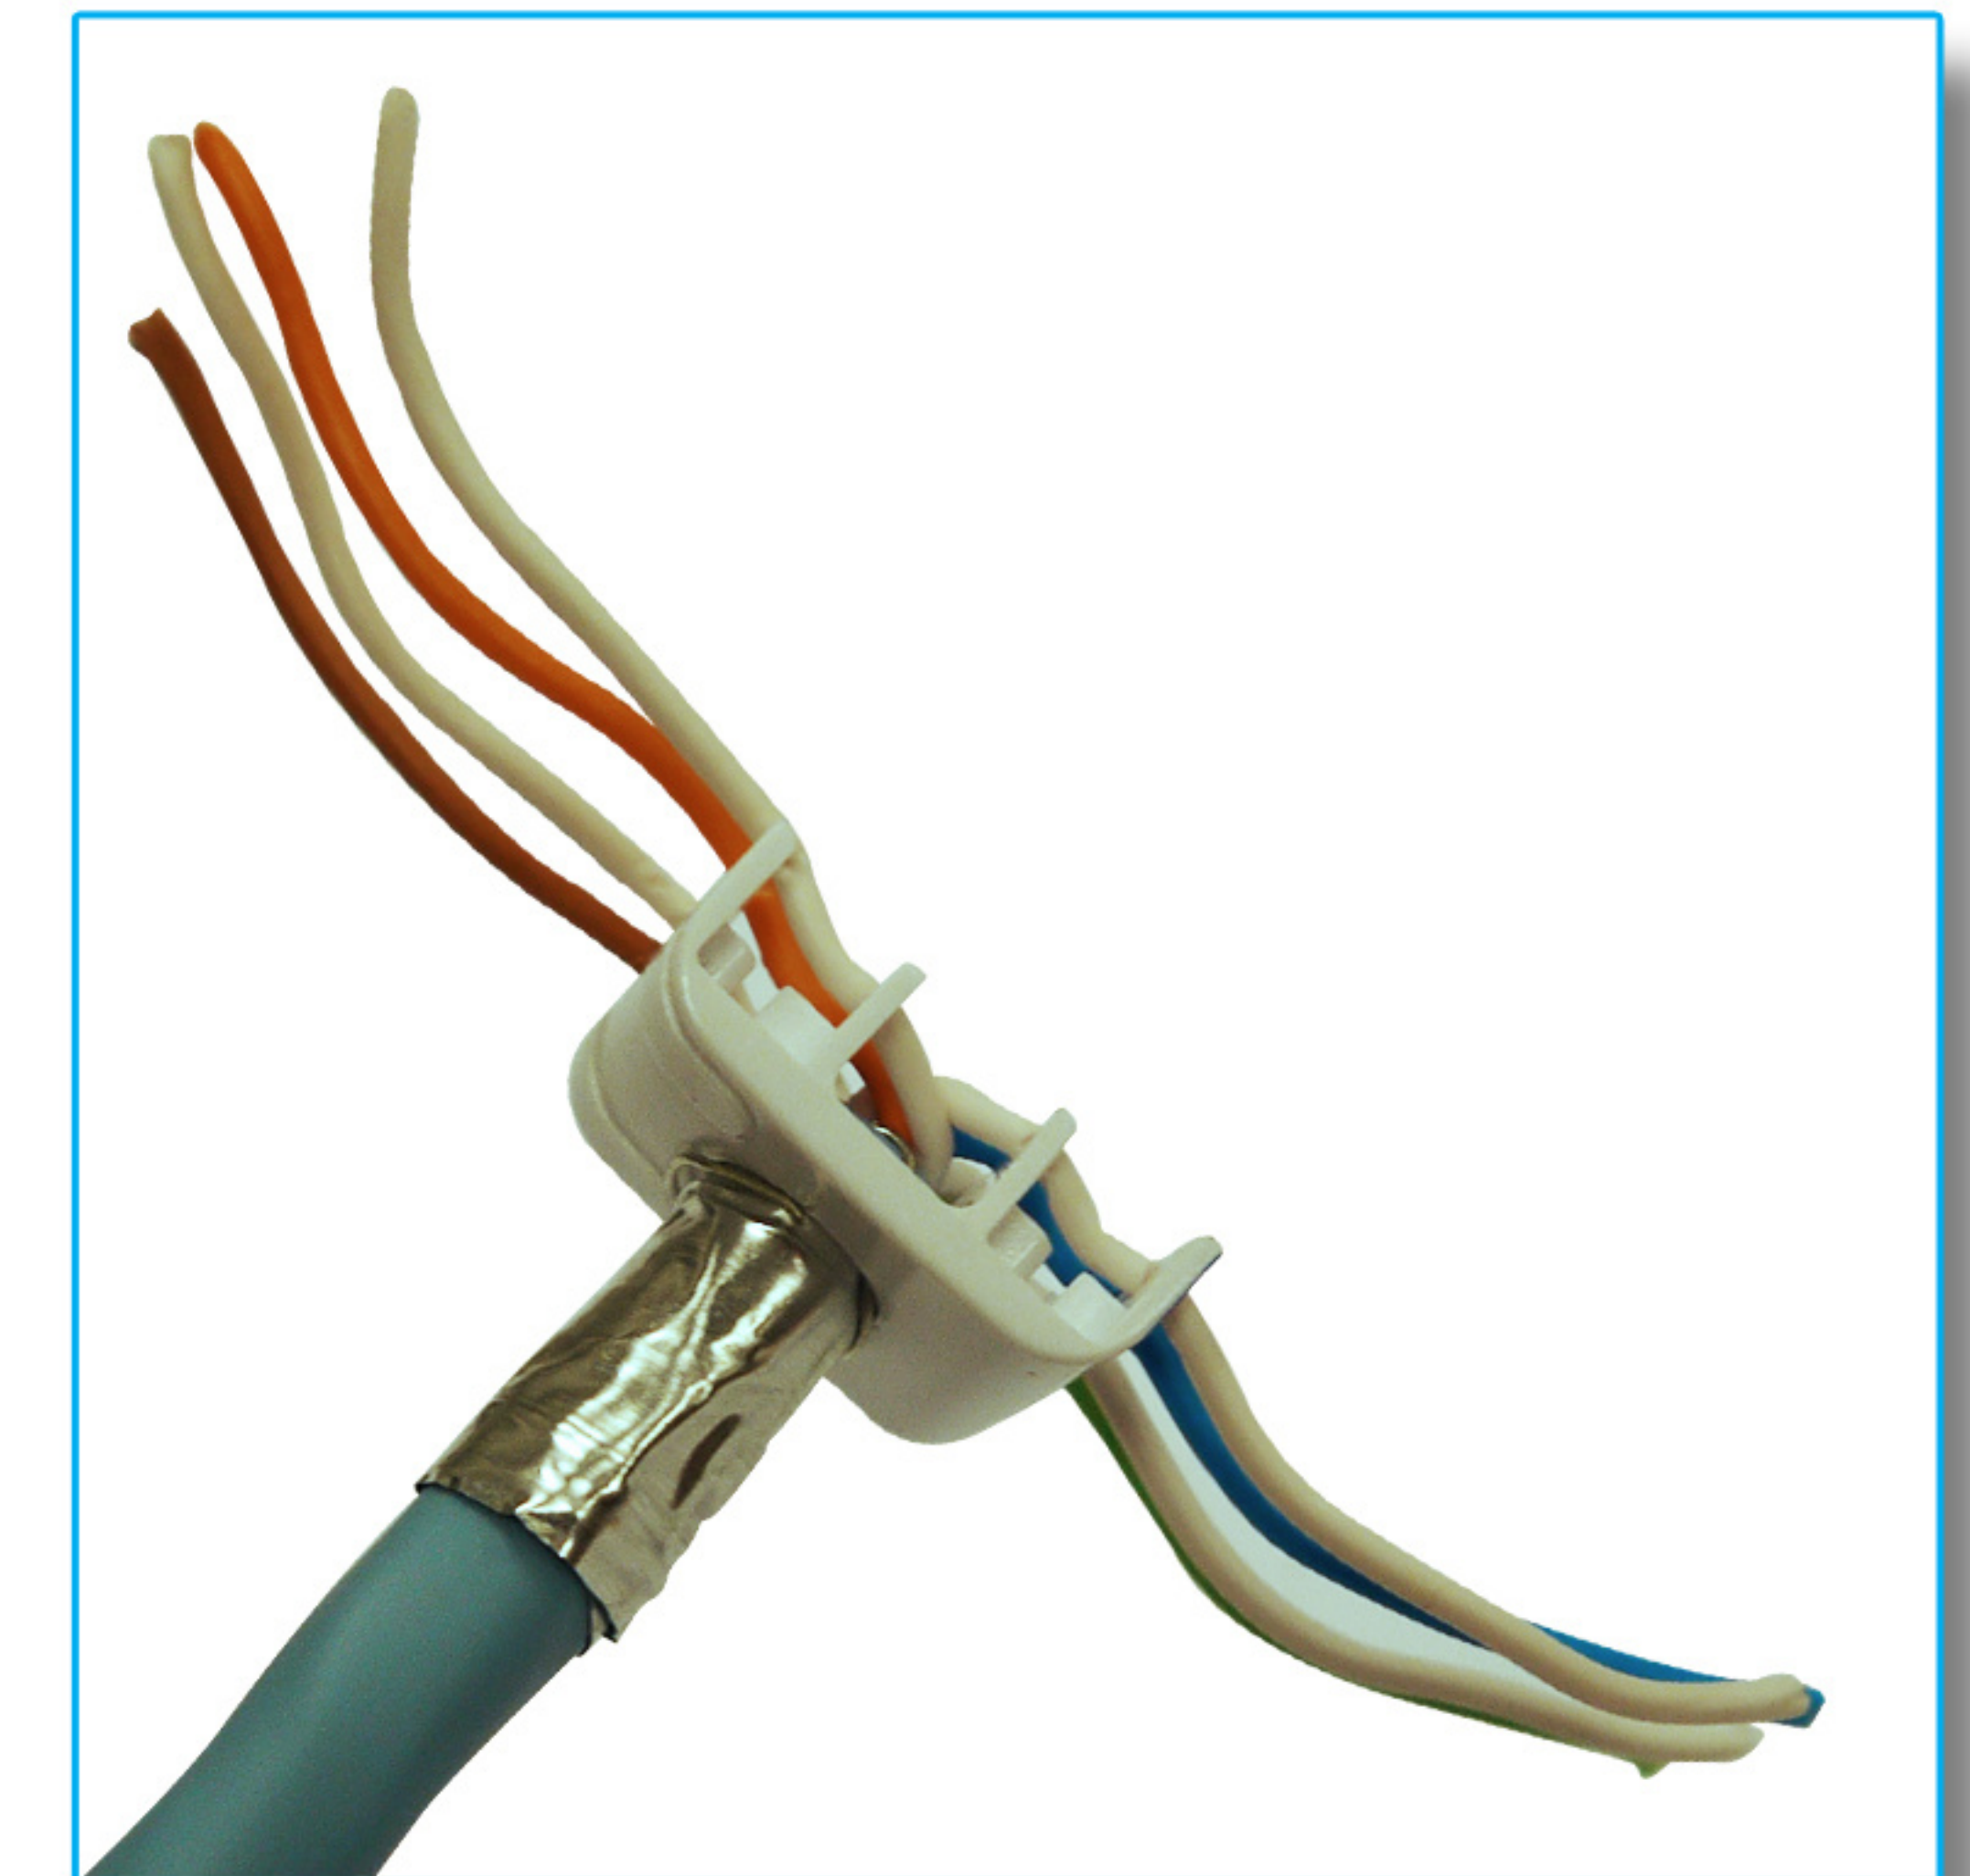


6. Locate cable pairs in correct colour codes.  
Position in cable guide use "B" positions.

## U/FTP CABLE Installation Manual Part 2/2




7. Once cable pairs are in the correct position trim off flush to cable guide.

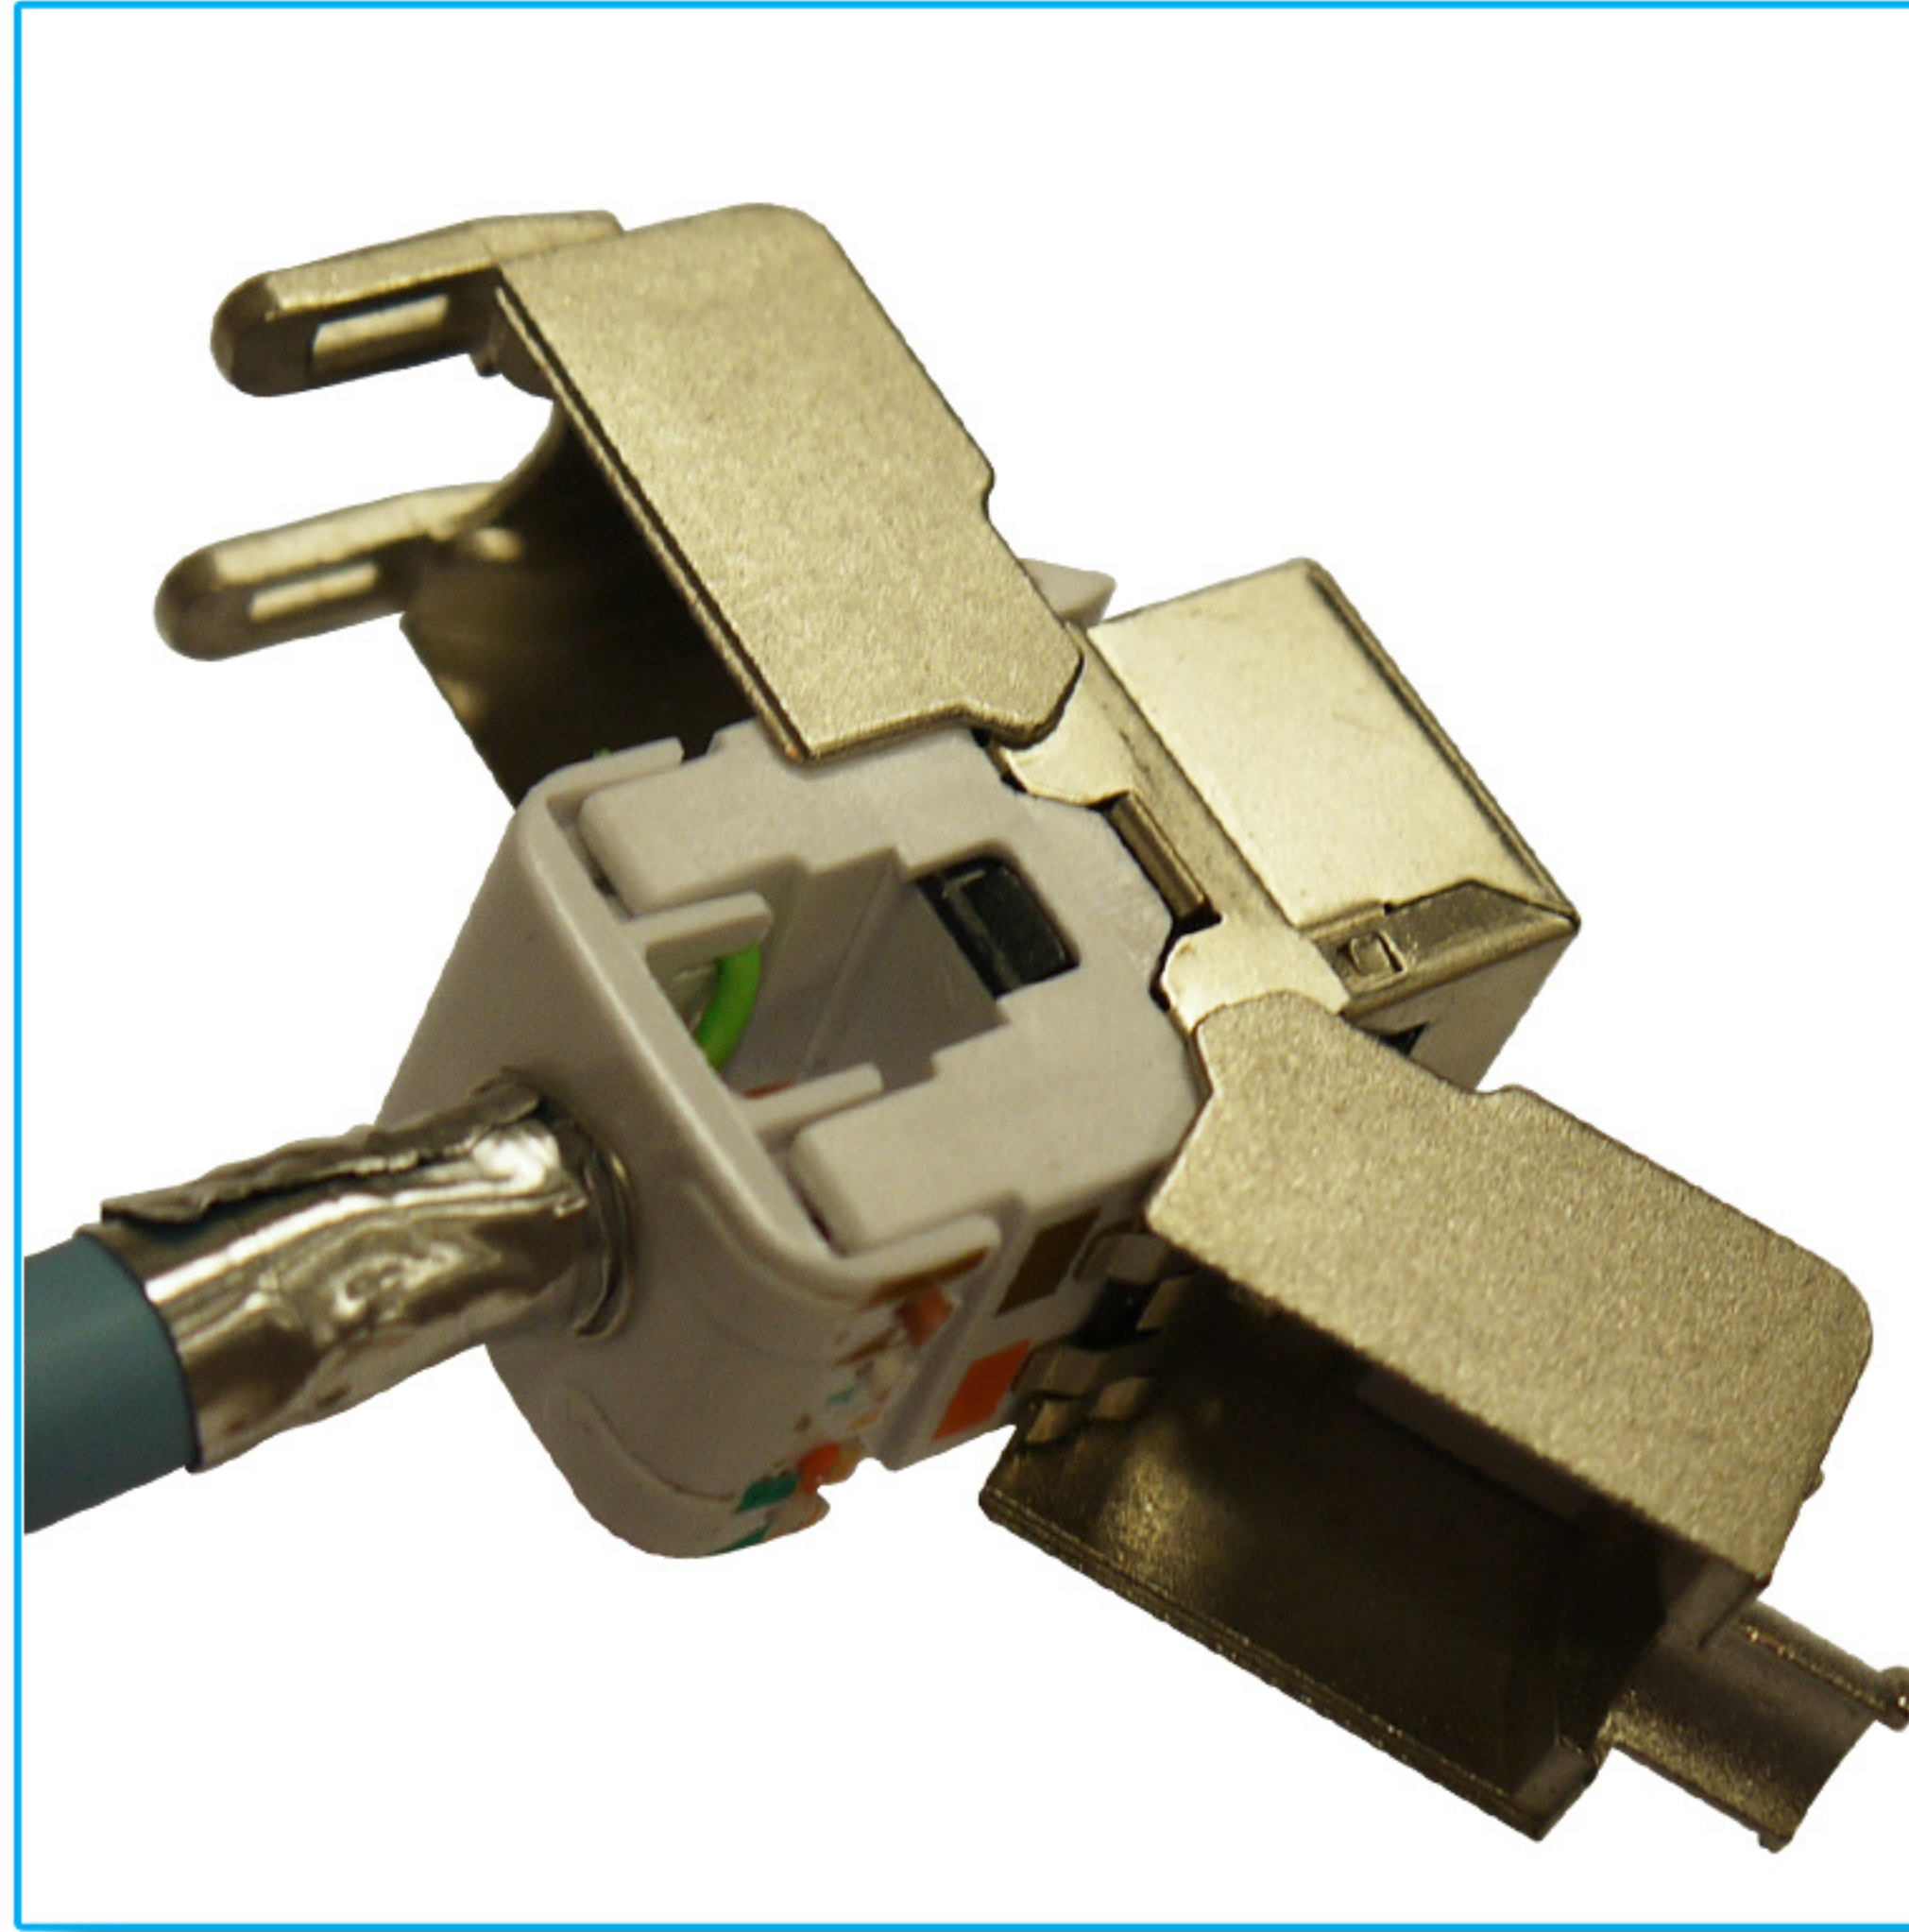

8. Locate cable guide onto connector body. Match colour codes on both parts.




9. Close bottom cover.

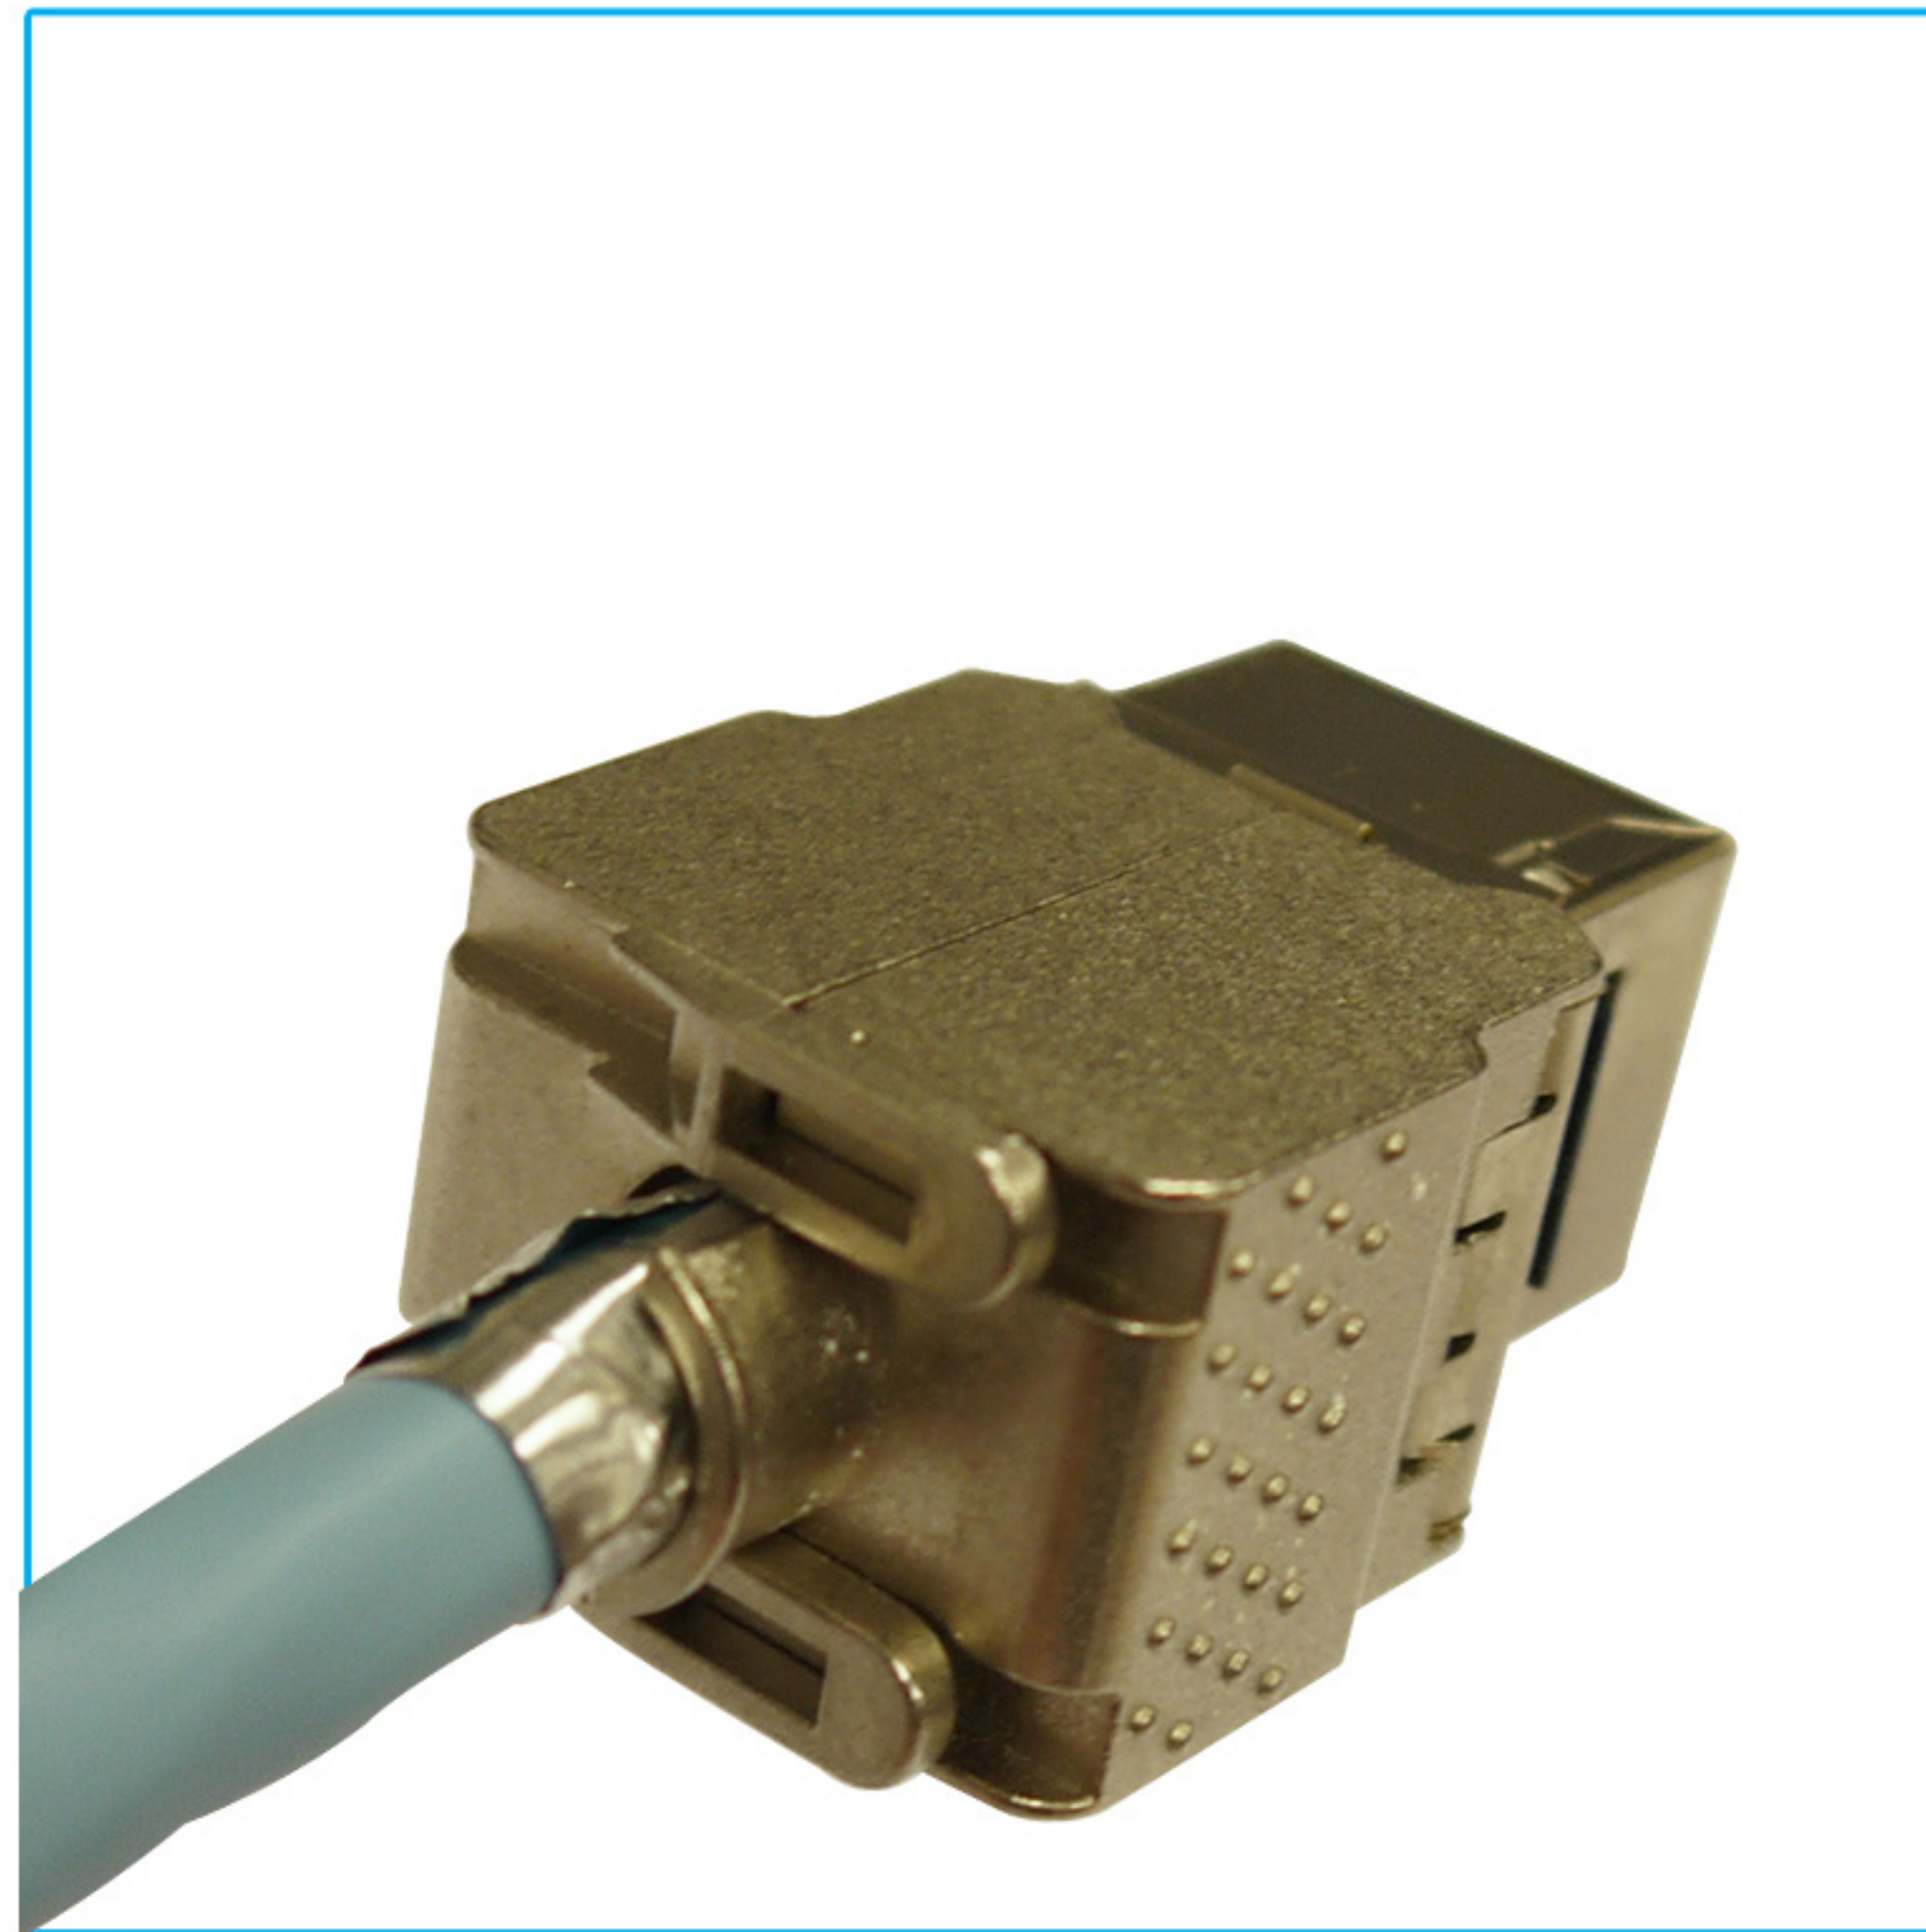

10. Close top cover.



11. Tie wrap around cable entry.

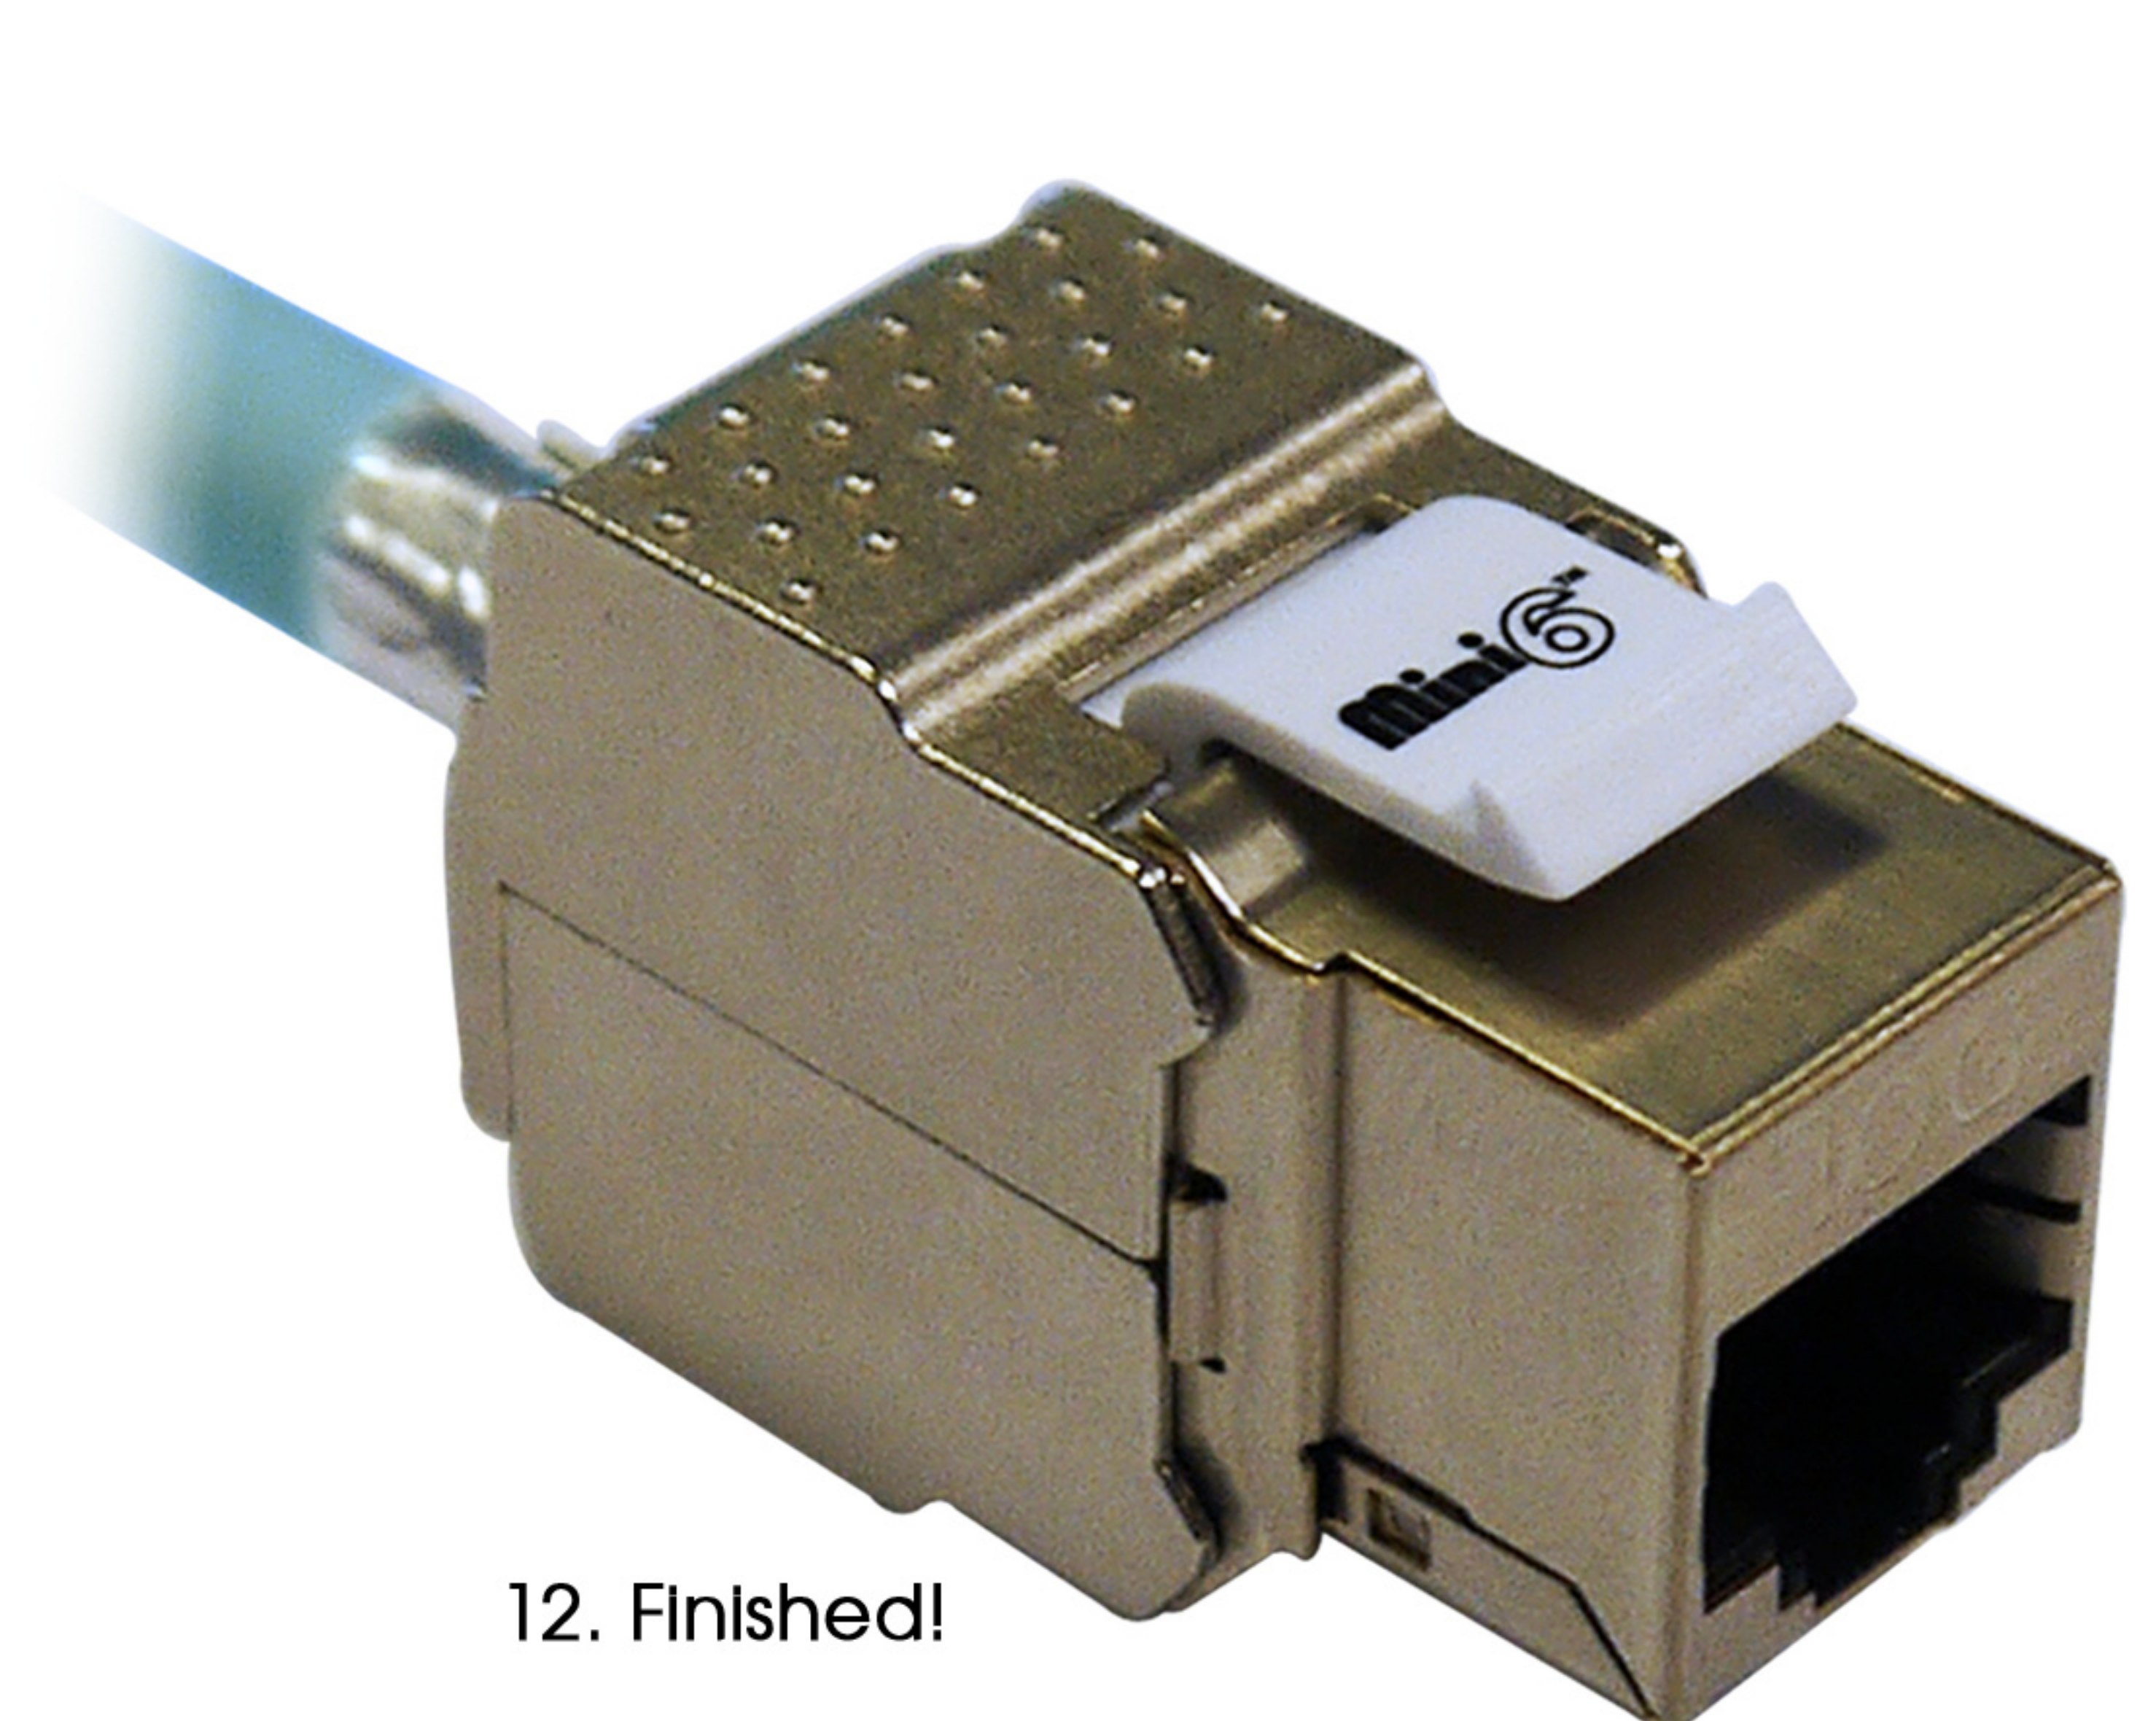

12. Finished!